




UPRIGHT SHOWCASE

Original instruction

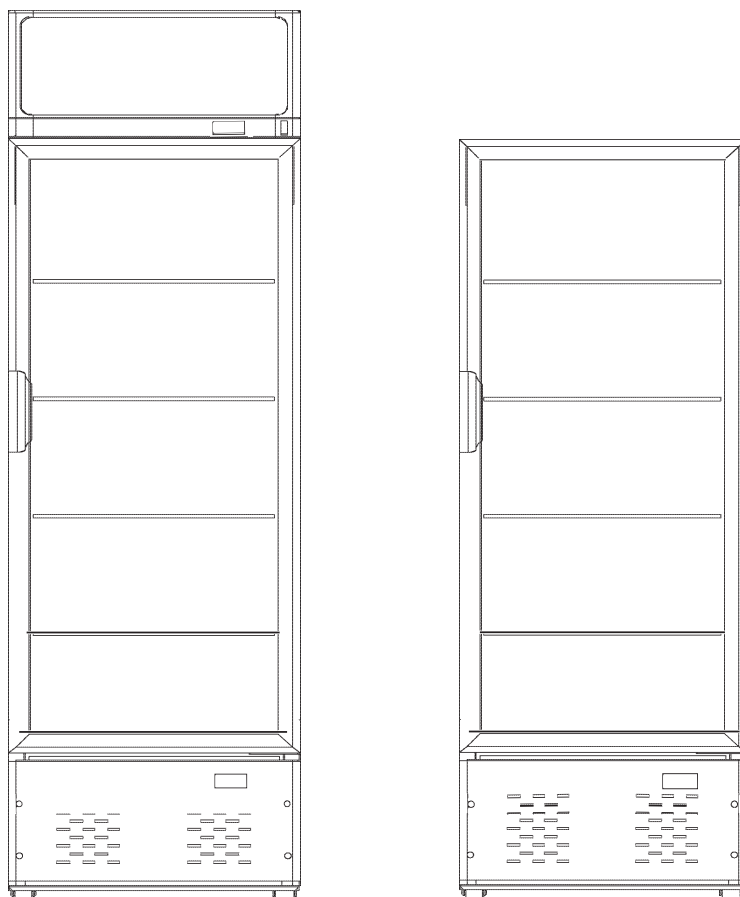

Thank you for buying this high quality appliance. This product has been designed using the latest technology and the most modern test facilities. If properly cared for, it will give long and reliable service. Please read these instructions thoroughly and keep them safely for future reference.

Table of Contents

Introduction..3

Safety Tips..3

Pack Contents..4

Installation.4

Operation.5

 Loading..5

 Temperature setting and control...5

 Lighting...6

Cleaning&Maintenance.6

 For lighting...6

 Routine Maintenance...6

Wiring Diagram7

Troubleshooting.7

Disposal.8

Warranty..8



Introduction

For your safety please read the manual carefully before assembling or using this product. Save this manual for future reference. Correct maintenance and operation of this machine you will get the best possible performance from your product.

Safety Tips

All electrical work must be carried out by suitably qualified persons

Position the product on a flat, stable surface.

Do not remove any components or service panels on this product.

Consult Local and National Standards to comply with the following:

- Health and Safety at Work Legislation.
- The appliance is intended for indoor use and commercial use only.
- DO NOT use the appliance for other than its intended use.
- DO NOT use damaged appliances. If you are in any doubt, consult service agent.
- WARNING: Do not use electrical appliances inside the appliance (e.g. heaters, ice-cream makers etc.), unless they are of the type recommended by the manufacturer.
- WARNING: Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- WARNING: Do not use mechanical device or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit
- DO NOT stand or support yourself on the base, shelves or door.
- DO NOT allow children to play with the packaging, Dispose of the packaging in accordance with the regulations of local authorities.
- Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance.
- Correctly connect and disconnect the plug. When insert the plug, it must be plugged tightly when pulling out the plug, the plug should be held by hand. Never pull the supply cord directly.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Children should be supervised to ensure that they do not play with the appliance.
- To guarantee safe operation, ensure that the appliance is setup and connected as described in the instruction manual.
- If any repairs and work on the appliance required, please should contact the customer service department.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



The symbol indicates there is a risk of fire since flammable material

Pack Contents

The following is included:

One carton box:

- SHOWCASE REFRIGERATOR x 1
- Instruction manual x 1
- single door: 4 shelves, double door: 8 shelves, three door: 12 shelves

We pride on quality and service, try our best to ensure the packaging contents are supplied fully functional and free of damage. Provided you find any damage as a result of transit, please contact your dealer immediately.

Installation

- Remove the appliance from the packaging. Make sure that all protective plastic film and coatings are thoroughly removed from all surfaces. To prevent injury or damage to the unit, the appliance should be unpacked and setup by two people.
- Maintain a distance of 10cm(4. 0 inches) between the appliance and walls or other objects for ventilation. Increase this distance if the obstacle is a heat source.
- Level the appliance by adjusting the screw feet. It should be placed on the level solid floor or base to reduce the vibration and noise.
- Appliance is built to be working according to ISO climatic classification class 4, wherever the temperature not exceeds 30°C and relative humidity not exceed 55%

The temperature in the place where the Refrigerator is located must be between 10 and 32°C.

Avoid locating it indirect sunlight or near heat source such as a radiator.

- Please make sure the appliance is properly ventilated. Not suitable for installation in an area where a waterjet could be used.
- Do not overload the power supply. Refer to rating label for power requirement.
- The plug must be accessible after installation.
- If the appliance is to be shutdown for long period, please disconnect the plug from socket outlet. Clean the appliance and leave the door open to prevent odor.
- Since the flammable refrigerant are used, please installed, handle, and service the appliance strictly according to the instruction and contact the professional agent or our after-sale service to dispose of the appliance.
- The A-weighted emission sound pressure level is below 70 dB(A);
- To avoid a hazard, please follow the instruction to use, handle, maintenance, clean, adjust, move and install the appliance.



For your personal safety, this appliance must be properly grounded.

- This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be inserted into an outlet that is properly grounded and installed. Consult a qualified electrician or service center if you do not completely understand the grounding instructions. If in doubt, ask as to whether the appliance is properly grounded, have a qualified electrician check the circuit to make sure the outlet is properly grounded.
- If the cable does not reach the nearest socket, either rearrange your store layout or ask a qualified electrician to fix a new socket. Never use extension leads or multiple adaptors.
- If power is cutoff, wait for at least 3 minutes before restart the appliance to avoid damaging the Compressor.

Operation

If the appliance has not been stored or moved in an upright position, let it stand upright for approximately 12 hours before operation.

Loading

To get the best results from your appliance, follow these instructions:

- Only store the bottles in the appliance when it has reached the correct operating temperature.
- It is better to do not place uncovered liquid inside the appliance.
- DO NOT place combustion, explosive or volatile article, corrosive acid or alkali, or liquid into the appliance.
- DO NOT store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- DO NOT obstruct the fans inside the appliance.
- Avoid opening the doors for prolonged periods of time.
- DO NOT exceed the maximum loading of 25kg per shelf. So as to avoid injury and damage.

Temperature setting and control

- The thermostat is located on the top front of the cabinet.
- To reduce the temperature within the cabinet, rotate the thermostat knob clockwise, while rotating the thermostat anti-clockwise, will increase the temperature.

★ The temperature control is set in the factory and it is recommended that any adjustments to the control temperature be made by a suitably qualified service technician.



WARNING: Do not turn the thermostat to its maximum(coldest) setting, as this may cause the appliance to run continuously and ‘ice-up’ .This will lead to a fault which is excluded from the warranty

Lighting

- Ensure the supply plug is connected to the socket, then the appliance will be in power.
- This appliance is equipped with durable, longlasting, power saving LED lights in the cabinet
- The lighting maybe switched on and off, using the illuminated switch(above the thermostat knob) , without the need to turnoff the refrigeration system.

Cleaning&Maintenance



Ensure the appliance is disconnected from the mains power supply, prior to beginning any cleaning or maintenance work.


For Lighting:

When a failure occurs on the lighting, please contact a service agent for replacement and/or repairs by authorized, qualified persons with the identical lighting.

Routine Maintenance:

- The appliance shall be disconnected from its power source during cleaning or maintenance and when replacing parts
- Clean the enclosure and interior of the appliance termly.
- Wash the unit with moist cloth.Never allow the switch, lighting, cable or plug to get wet.
- DO NOT use abrasive cleaning agents.These can leave harmful residues.Use only mild soapy water.
- Clean the door seal with water only.
- Ensure that no cleaning water penetrates into the electrical components.
- DO NOT use jet/pressure water to clean the appliance.
- DO NOT allow water for cleaning to run through the inner drain hole into the water container.
- DO NOT allow oil or fat to come into contact with the plastic components or door seal.Clean them immediately if contact occurs.
- Take care when cleaning the rear of the appliance.
- Please ask for an agent or qualified technician to carryout repairs if required.
- If the appliance is to be left inactive for long periods, unplug the appliance, empty the shelves and clean thoroughly.

Wiring Diagram

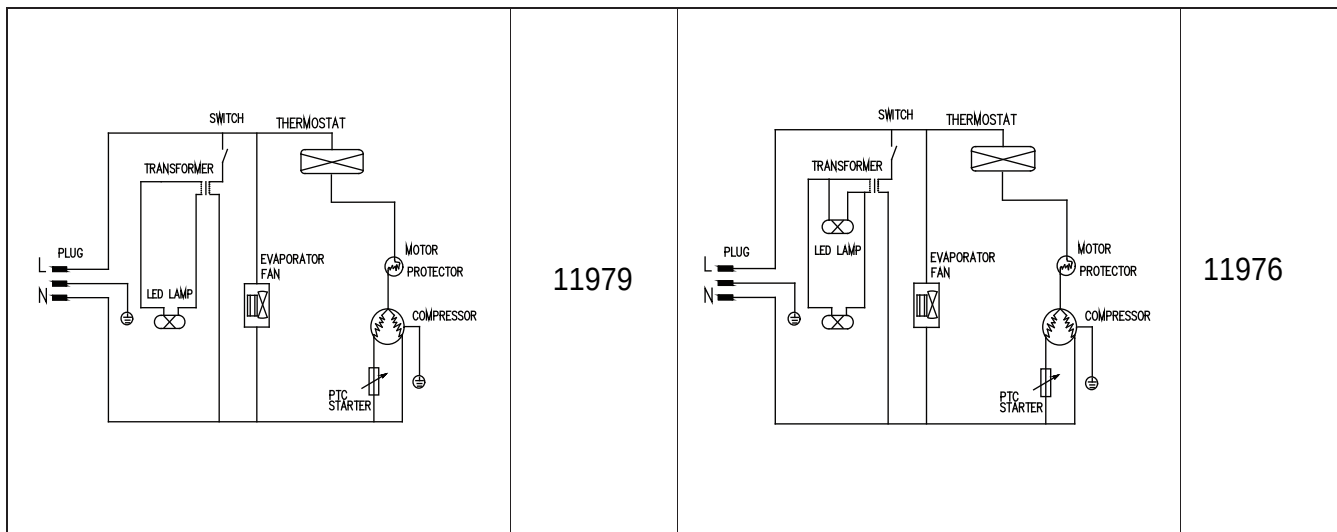

Troubleshooting

If your appliance develops a fault, please check the following table.

Fault	Probable Cause	Action
The appliance is not working	The unit is not switched on	Check the unit is plugged incorrectly
	Plug and lead are damaged	Call your agent or qualified technician
	Fuse in the plug has blown	Replace the fuse(plug)
	Internal wiring fault	Call your agent or qualified technician
The appliance turns on, but the temperature is too high/low	Condenser blocked with dust	Call your agent or qualified technician
	Doors are not shut properly	Check doors are shut and seals are not damaged
	Appliance is located near a heat source or airflow to the condenser is being interrupted	Move the refrigerator to a more suitable location
	Ambient temperature is too high	Increase ventilation or move appliance to a cooler position
	Unsuitable products are being stored in the appliance	Remove any excessive hot foodstuffs or blockages to the fan
	Appliance is overloaded	Reduce the amount of products stored in the appliance
The appliance is unusually loud	Loose nut/screw	Check and tighten all nuts and screws
	The appliance has not been installed in a level or stable position	Check installation position and change if necessary
The appliance is leaking water	The appliance is not properly leveled	Adjust the screw feet to level the appliance(if applicable)
	The discharge outlet is blocked	Clear the discharge outlet
	Cleaning water flows into the water container and make it overflowing	Please avoid the water for cleaning goes into water container.
	The water container is damaged	Call your agent or qualified Technician

Disposal

The packaging is designed to protect the appliance and individual components during transport and is made of recyclable materials.

Please return the packing material to the nearest official collection point so that the various materials can be recycled or reused as far as possible and so as to avoid throwing them away. Old appliances still contain reusable material and should not be disposed of with household or bulk refuse.

If possible remove any door(s) and discard separately.

Remove the spring-action or bolt catch from the appliance or render it unusable so that children can not become trapped inside

Please note the refrigeration system contains gases and refrigerants which require special waste disposal. Ensure that the refrigerant circuit is not damaged prior to disposal. You can contribute to environmental awareness by insisting on an appropriate non-polluting method of disposal. Information concerning the refrigerant and insulation materials used can be found on the rating label.

Information on collection dates or collection points can be obtained from the waste disposal authorities or local council.



The symbol  on the product or its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Warranty

The appliance and the components we produce, which are shown to the company's satisfaction to be defective, will be replaced free of charge if it is in the guarantee period from the date of consignment.

Any such faults shall not, however, be considered if due to incorrect use of the product resulting from the instructions given in this handbook not having been followed.

ALL THE RESPONSIBILITY FOR THE FAILURE TO RESPECT THE EXISTING LOCAL STATUTES ARE THE RESPONSIBILITY OF THE OWNER.

ALL TYPES AND MODELS ARE SUBJECT TO CONTINUOUS IMPROVEMENT AND MANUFACTURER THEREFORE RESERVES THE RIGHT TO MAKE MODIFICATIONS TO THE SHAPE, EQUIPMENT AND TECHNOLOGY.